

NIC 400V 3~

ALARM

Start $> 0,5V$
Stop $< 0,5V$


0-10V

5 3

Alternativ

POTENTIOMETER

10kOhm

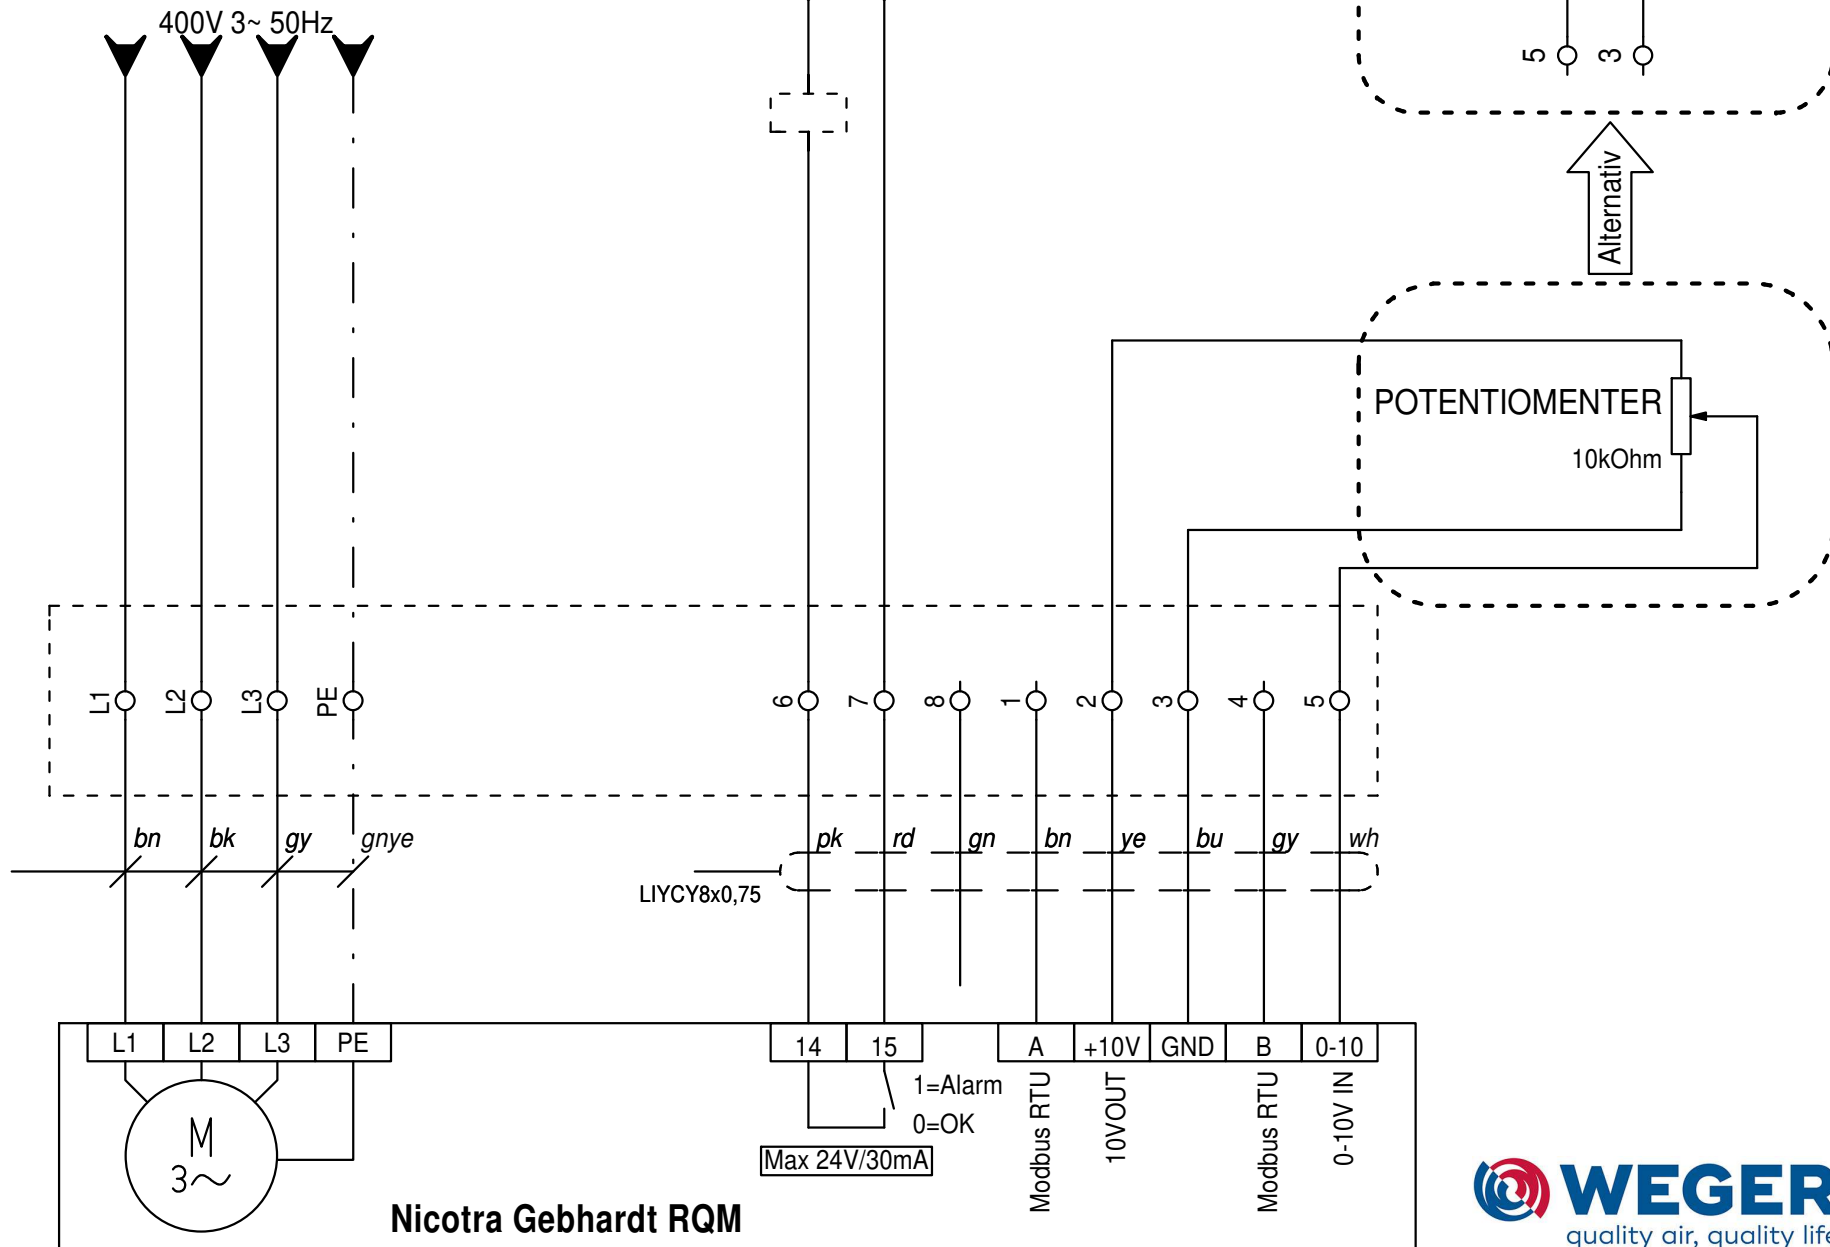

Nicotra Gebhardt RQM

